

TPS AUTORROLL, HOW IT WORKS? HOW TO ACTIVATE AND DESACTIVATE?

- How it to Works?

When you reboot the Azbox it will capture the keys, if we have the receiver previously tuned at one Hotbird channel.

- How i can do to activate the TPS Autorroll?

- 1) Press Menu and than Blue Button (With this combination we will access to the secret menu)
- 2) Go to the separator Viaccess and to Provider 00 7C 00 Index 00, in the Code Data field at least one byte should be different than zero, for example like showed in this image:




- 3) Reboot receiver, wait some second (it should take 1 or 2 minutes) and after that receiver will decrypt TPS!

- TPS is not working what i should do to have it working again?

First be sure that you have the TPS emu active, like we explain behind, if you have it active, please reboot receiver, it will appear a message: "Now Updating, Please Waiting!". During this process the Azbox will catch the correct keys.

- I don't have dish turned to Hotbird, so i want to deactivate TPS Autorroll to have fast boot, how i can do that?

- 1) Press Menu and than Blue Button (With this combination we will access to the secret menu)
- 2) Go to the separator Viaccess and to Provider 00 7C 00 Index 00, in the Code Data field put all bytes with zero value, for example like showed in this image:

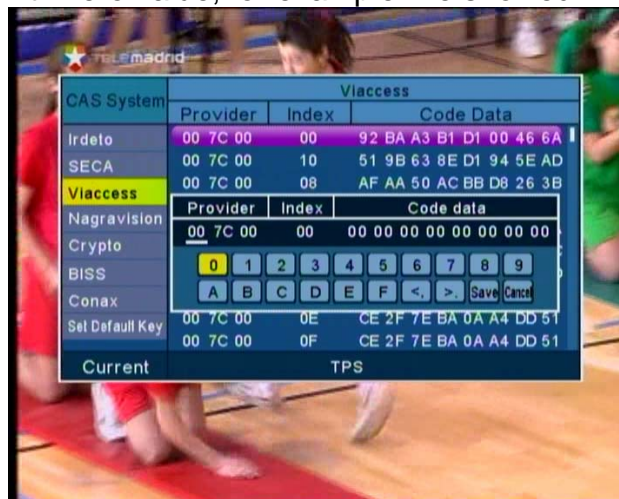

- 3) Than Reboot receiver, The boot will be faster!